

CAM LOCK TRIMMER CUTTER

[Reloading](#) > [Case Preparation](#) > [Case Trimming](#) > [Case Trimmer Pilots](#)

Replacement cutter for the Hornady Cam Lock Trimmer.



Attributes

- Name: [CAM LOCK TRIMMER CUTTER](#)
- Manufacturer: [HORNADY](#)
- Product no.: 100031519
- Mfr. No.: 390972
- Delivery weight: 0.023kg
- Shipping height: 25mm
- Shipping width: 44mm
- Shipping length: 140mm
- UPC: 090255909722

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [CAM LOCK TRIMMER CUTTER Safety Instruction Guide](#)
- [About Us](#)

CAM LOCK TRIMMER CUTTER Safety Instruction Guide

Introduction

Thank you for choosing the Hornady Cam Lock Trimmer Cutter. This replacement cutter is designed for safe and effective use with the Hornady Cam Lock Trimmer. To ensure your safety and the proper functioning of the product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that the product is used in accordance with the manufacturer's instructions.
- Always inspect the cutter for any signs of damage before use.
- Keep the cutter out of reach of children and vulnerable individuals.
- Use the cutter only for its intended purpose.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about product recalls through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE), such as safety goggles and gloves, when using the cutter.
- Ensure that the trimmer is securely mounted and stable before operation.
- Avoid loose clothing and jewelry that may get caught in the cutter.
- Do not exceed the recommended cutting speeds and pressures.
- Always disconnect the trimmer from the power source when changing the cutter or performing maintenance.
- Do not attempt to modify or alter the cutter in any way.

Instructions for Installation and Usage

1. Installation:

- Ensure that the trimmer is unplugged or disconnected from the power source.
- Remove the existing cutter by loosening the locking mechanism.
- Carefully align the new Cam Lock Trimmer Cutter with the trimmer's mounting bracket.
- Securely tighten the locking mechanism to hold the cutter in place.
- Doublecheck that the cutter is properly installed and secure before proceeding.

2. Usage:

- Connect the trimmer to the power source and ensure it is in a stable position.
- Adjust the trimmer settings according to the material being cut.
- Begin trimming by applying consistent pressure, allowing the cutter to do the work.
- Monitor the cutting process closely and stop immediately if you notice any unusual noises or vibrations.
- After use, disconnect the trimmer from the power source and clean the cutter to remove any debris.

Disposal Instructions

- Dispose of the cutter in accordance with local regulations for hazardous waste.
- Do not throw the cutter in regular household waste.

- If you are unsure about disposal methods, contact your local waste management authority for guidance.

Contact Information for Further Support

For any inquiries regarding safety or product information, please refer to the manufacturer's website or contact their customer support directly. Ensure to have the product details handy for a more efficient response.

By following these safety instructions, you can ensure a safe and effective experience with the Hornady Cam Lock Trimmer Cutter. Thank you for prioritizing safety!

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz