

LOCK-N-LOAD PISTOL METERING INSERTS - HORNADY LOCK-N-LOAD PISTOL METERING INSERT

[Reloading](#) > [Powder Handling](#) > [Measure Stands & Accessories](#)

For use in your L-N-L Powder Measure, this pistol rotor features a smaller chamber for more precise metering of charge weights between .5 and 17 gr. For extremely precise measurements, the Micrometer Pistol Insert allows you to make and monitor incremental changes and return to previous settings. In order to use this insert, you must have the Pistol Rotor and Standard Metering Insert.



Attributes

- Name: [HORNADY LOCK-N-LOAD PISTOL METERING INSERT](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749001290
- Mfr. No.: 050116
- Delivery weight: 0.113kg
- Shipping height: 36mm
- Shipping width: 36mm
- Shipping length: 150mm
- UPC: 090255501162

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [LOCKNLOAD PISTOL METERING INSERTS SAFETY INSTRUCTIONS](#)
- [About Us](#)

LOCKNLOAD PISTOL METERING INSERTS SAFETY INSTRUCTIONS

Introduction

Thank you for purchasing the LOCKNLOAD PISTOL METERING INSERT from Hornady. This product is designed for use with your LNL Powder Measure, providing precise metering of charge weights. It is important to follow safety guidelines to ensure safe and effective use.

General Safety Guidelines

- Always read and understand the instructions before using the product.
- Ensure that the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the product for any signs of damage or wear before use.
- In case of an emergency or unsafe situation, stop using the product immediately and seek help.

Specific Safety Precautions for Use

- Use the LOCKNLOAD PISTOL METERING INSERT only with the compatible Pistol Rotor and Standard Metering Insert.
- Do not exceed the recommended charge weight range of .5 to 17 grains.
- Make incremental changes carefully and monitor settings to avoid accidental overcharges.
- Store the product in a dry and safe location when not in use.
- Avoid using the product in wet or humid environments to prevent damage.

Instructions for Installation and Usage

1. Installation

- Ensure that your LNL Powder Measure is clean and free of debris.
- Remove the existing metering insert from the Pistol Rotor.
- Insert the LOCKNLOAD PISTOL METERING INSERT into the Pistol Rotor, ensuring it is securely in place.
- Reattach the Pistol Rotor to the LNL Powder Measure.

2. Usage

- Set the desired charge weight using the Micrometer feature for precise adjustments.
- Gradually adjust the metering insert while monitoring the charge weight.
- Always doublecheck the charge weight before using the powder in reloading.
- If you need to return to a previous setting, use the Micrometer feature to revert accurately.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in general household waste.
- If the product is damaged or no longer functional, consider recycling where facilities exist.

Contact Information for Further Support

For any questions, concerns, or safety inquiries regarding the LOCKNLOAD PISTOL METERING INSERT, please

reach out to the manufacturer or your local distributor. Ensure to have the product details ready for assistance.

Thank you for prioritizing safety while using the LOCKNLOAD PISTOL METERING INSERT. Enjoy your reloading experience!

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz