

LOCK-N-LOAD RIFLE METERING INSERTS - HORNADY LOCK-N-LOAD POWDER MEASURE STANDARD METERING INSERT

[Reloading](#) > [Powder Handling](#) > [Measure Stands & Accessories](#)

Switch this metering unit in and out of your Lock-N-Load Powder Measure with just a push of a button. Not compatible with the Bench Rest Grade or Black Powder Measure.



Attributes

- Name: [HORNADY LOCK-N-LOAD POWDER MEASURE STANDARD METERING INSERT](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749001312
- Mfr. No.: 050120
- Delivery weight: 0.113kg
- Shipping height: 10mm
- Shipping width: 97mm
- Shipping length: 160mm
- UPC: 090255501209

Item details

Made in USA

Table of Contents

- Startpage
- LOCKNLOAD RIFLE METERING INSERTS SAFETY INSTRUCTION GUIDE
- About Us

LOCKNLOAD RIFLE METERING INSERTS SAFETY INSTRUCTION GUIDE

Introduction

Thank you for choosing the LOCKNLOAD Rifle Metering Inserts by Hornady. This product is designed to enhance the functionality of your LockNLoad Powder Measure. Please read this safety instruction guide carefully to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always ensure that the product is used in accordance with the manufacturer's instructions.
- Keep this product out of the reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before use.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about product recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not use the metering insert if it shows any signs of damage or malfunction.
- Ensure that the LockNLoad Powder Measure is properly secured before inserting or removing the metering unit.
- Only use the metering insert with compatible Hornady products; it is not compatible with the Bench Rest Grade or Black Powder Measure.
- Avoid using excessive force when switching the metering unit in and out of the Powder Measure.
- Always follow the recommended procedures for cleaning and maintaining the product to avoid any hazards.

Instructions for Installation and Usage

1. Installation:

- Ensure the LockNLoad Powder Measure is unplugged and not in use.
- Locate the button on the Powder Measure that allows for the insertion and removal of the metering unit.
- Press the button and gently remove the existing metering unit if one is installed.
- Align the new LOCKNLOAD Rifle Metering Insert with the opening of the Powder Measure.
- Press the button again to insert the new metering unit securely into place.
- Ensure the metering insert is fully seated and locked in position before use.

2. Usage:

- Once the metering insert is securely installed, you may begin using the LockNLoad Powder Measure.
- Follow the specific loading guidelines provided with your Powder Measure for optimal performance.
- Monitor the operation of the Powder Measure during use to ensure it is functioning correctly.

3. Removal:

- To remove the metering insert, ensure the Powder Measure is not in use.
- Press the button to unlock the metering insert.
- Gently pull the insert out of the Powder Measure.

Disposal Instructions

- Dispose of the LOCKNLOAD Rifle Metering Inserts in accordance with local regulations.
- Do not dispose of the product in household waste.
- Contact your local waste management authority for guidance on proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the LOCKNLOAD Rifle Metering Inserts, please refer to the manufacturer's contact information provided with the product packaging.

Thank you for your attention to these safety instructions. Enjoy your experience with the LOCKNLOAD Rifle Metering Inserts.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz