

LOCK-N-LOAD RIFLE METERING INSERTS - HORNADY LOCK-N-LOAD MICROMETER METERING INSERT

[Reloading](#) > [Powder Handling](#) > [Measure Stands & Accessories](#)

Switch this metering unit in and out of your Lock-N-Load Powder Measure with just a push of a button. Not compatible with the Bench Rest Grade or Black Powder Measure.



Attributes

- Name: [HORNADY LOCK-N-LOAD MICROMETER METERING INSERT](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749004510
- Mfr. No.: 050124
- Delivery weight: 0.113kg
- Shipping height: 15mm
- Shipping width: 97mm
- Shipping length: 206mm
- UPC: 090255501247

Item details

Made in USA

Table of Contents

- Startpage
- LOCKNLOAD RIFLE METERING INSERTS SAFETY INSTRUCTIONS
- About Us

LOCKNLOAD RIFLE METERING INSERTS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the LOCKNLOAD RIFLE METERING INSERTS by Hornady. This product is designed to enhance your reloading experience by allowing you to switch metering units in and out of your LockNLoad Powder Measure easily. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always follow the manufacturer's instructions and guidelines.
- Keep this product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of damage or wear.
- In case of any malfunction or damage, discontinue use immediately and seek assistance.

Specific Safety Precautions for Use

- Do not use the LOCKNLOAD RIFLE METERING INSERTS with the Bench Rest Grade or Black Powder Measure.
- Avoid operating the product in wet or damp conditions.
- Always ensure that the Powder Measure is securely mounted before use.
- Use appropriate personal protective equipment, such as safety glasses, while working with the product.
- Be cautious when switching metering units; ensure that your hands are dry and free from any obstructions.

Instructions for Installation and Usage

1. Installation:

- Ensure that the LockNLoad Powder Measure is turned off and unplugged before installation.
- Locate the metering unit slot on your Powder Measure.
- Align the LOCKNLOAD RIFLE METERING INSERT with the slot.
- Gently push the metering unit into place until you hear a click, indicating it is securely installed.

2. Usage:

- Turn on the Powder Measure and set it to the desired settings.
- Use the metering unit to dispense powder as needed.
- After use, ensure that the Powder Measure is turned off and cleaned according to the manufacturer's guidelines.
- To remove the metering unit, press the release button and gently pull the unit out.

Disposal Instructions

- Dispose of the LOCKNLOAD RIFLE METERING INSERTS in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- If the product is damaged or no longer usable, consider recycling materials where possible.

Contact Information for Further Support

For any inquiries or further assistance regarding the LOCKNLOAD RIFLE METERING INSERTS, please refer to the manufacturer's website or contact your local retailer.

Thank you for your attention to these safety instructions. By following these guidelines, you can ensure a safe and enjoyable experience with your LOCKNLOAD RIFLE METERING INSERTS.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz