

# SPRING COCKING LEVER LH 486 12GA

[Home](#)

NO IMAGE  
AVAILABLE

## Attributes

- Name: [BERETTA USA SPRING COCKING LEVER LH 486 12GA](#)
- Manufacturer: [BERETTA USA](#)
- Product no.: 913000593
- Mfr. No.: C5E059
- Model: 486
- Weapon type: Beretta

# Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for BERETTA USA Spring Cocking Lever LH 486 12GA](#)
- [About Us](#)

# Safety Instruction Guide for BERETTA USA Spring Cocking Lever LH 486 12GA

## Introduction

Thank you for choosing the BERETTA USA Spring Cocking Lever LH 486 12GA. This highquality component is designed to enhance the functionality and reliability of your BERETTA USA shotgun. To ensure safe use and compliance with the EU General Product Safety Regulation (GPSR), please read this safety instruction guide carefully.

## General Safety Guidelines

- Ensure that you are familiar with the operation of your shotgun before using this product.
- Always handle firearms with care, treating every firearm as if it is loaded.
- Store firearms and components in a secure location, out of reach of children and unauthorized users.
- Regularly inspect your shotgun and its components for wear or damage.
- Use only compatible parts for your firearm to avoid malfunctions.
- Report any unsafe products or accidents to the appropriate authorities.

## Specific Safety Precautions for Use

- Always wear appropriate eye and ear protection when using your firearm.
- Ensure that the shotgun is unloaded before installation or maintenance of the Spring Cocking Lever.
- Follow the manufacturer's instructions for the proper use of your firearm.
- Do not attempt to modify the Spring Cocking Lever or any other firearm components.
- Be aware of your surroundings and ensure a safe shooting environment.

## Instructions for Installation and Usage

### Installation

1. **Prepare Your Shotgun:** Ensure the shotgun is unloaded and pointed in a safe direction.
2. **Remove the Old Component:** Carefully disassemble the shotgun according to the manufacturer's guidelines to access the cocking lever.
3. **Install the Spring Cocking Lever:**
  - Align the new Spring Cocking Lever LH 486 12GA with the designated slot.
  - Secure it in place according to the manufacturer's specifications.
4. **Reassemble Your Shotgun:** Follow the disassembly steps in reverse to reassemble your shotgun.
5. **Function Check:** Before using the firearm, perform a function check to ensure proper installation and operation.

### Usage

- After installation, ensure that the Spring Cocking Lever operates smoothly.
- Regularly check the functionality of the lever during routine maintenance.
- If any issues arise, consult a qualified gunsmith for assistance.

## Disposal Instructions

- Dispose of the product in accordance with local regulations regarding electronic waste and firearm components.
- Do not dispose of the Spring Cocking Lever in regular household waste.
- Consider recycling options if available.

## **Contact Information for Further Support**

For any questions or concerns regarding the Spring Cocking Lever LH 486 12GA, please refer to the manufacturer's website or contact their customer service for assistance.

By following these guidelines, you can ensure the safe use of your BERETTA USA Spring Cocking Lever and enhance your overall shooting experience. Thank you for prioritizing safety.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)