

spindle for seater head - spindle M6/M4 for seater head

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

spindle M6/M4 for seater head

NO IMAGE
AVAILABLE

Attributes

- Name: [spindle M6/M4 for seater head](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2013510
- Mfr. No.: 3000053050
- Delivery weight: 0.01kg
- Shipping height: 50mm
- Shipping width: 6mm
- Shipping length: 6mm

Table of Contents

- [Startpage](#)
- [Safety Instructions for Spindle M6/M4 for Seater Head](#)
- [About Us](#)

Safety Instructions for Spindle M6/M4 for Seater Head

Introduction

Thank you for choosing the Spindle M6/M4 for Seater Head by TRIEBEL. This safety instruction guide is designed to help you use this product safely and effectively. Please read this guide carefully before installation and use. Following these instructions will help ensure your safety and the proper functioning of the product.

General Safety Guidelines

- Always ensure that the spindle is compatible with your seater head before use.
- Inspect the spindle for any damage or defects prior to installation.
- Keep the spindle out of reach of children and vulnerable individuals.
- Use the spindle only for its intended purpose as specified in this guide.
- If you experience any issues or malfunctions, discontinue use immediately and seek assistance.

Specific Safety Precautions for Use

- Avoid using the spindle in wet or damp conditions to prevent electrical hazards.
- Do not exceed the recommended torque specifications during installation to prevent damage.
- Wear appropriate personal protective equipment (PPE) such as gloves and safety goggles when handling the spindle.
- Ensure that the work area is clean and free from hazards to prevent accidents during installation.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and equipment before starting the installation.
- Ensure that your workspace is welllit and free from obstructions.

2. Installation Steps:

- Remove the existing spindle from the seater head if applicable.
- Align the M6/M4 spindle with the mounting holes on the seater head.
- Insert the spindle into the mounting holes and ensure it is seated properly.
- Secure the spindle using the appropriate fasteners, ensuring not to overtighten.
- Doublecheck that the spindle is firmly attached and does not wobble.

3. Usage Instructions:

- Use the spindle only as intended for the seater head.
- Regularly check the spindle for signs of wear or damage during use.
- If you notice any unusual sounds or movements while using the spindle, stop immediately and inspect the product.

Disposal Instructions

- Dispose of the spindle in accordance with local regulations for electronic waste.
- Do not dispose of the spindle in regular household waste.
- Consider recycling the spindle if possible to minimize environmental impact.

Contact Information for Further Support

For any safety inquiries or further assistance, please refer to the manufacturer's contact information provided with the product packaging.

By following these safety instructions, you can help ensure a safe and effective experience with your Spindle M6/M4 for Seater Head. Always prioritize safety and do not hesitate to seek help if needed. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk