

spindle for seater head - spindle M6/M4 for seater head

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

spindle M6/M4 for seater head

NO IMAGE
AVAILABLE

Attributes

- Name: [spindle M6/M4 for seater head](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2013511
- Mfr. No.: 3000053056
- Delivery weight: 0.01kg
- Shipping height: 56mm
- Shipping width: 6mm
- Shipping length: 6mm

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for Spindle M6/M4 for Seater Head](#)
- [About Us](#)

Safety Instruction Guide for Spindle M6/M4 for Seater Head

Introduction

Thank you for choosing the Spindle M6/M4 for Seater Head by TRIEBEL. This guide provides essential safety information to ensure the safe use and installation of the product. Please read through the entire guide carefully before using the spindle.

General Safety Guidelines

- Always ensure that the spindle is compatible with your seater head model before installation.
- Inspect the spindle for any visible damage or defects before use. Do not use if damaged.
- Keep the spindle out of reach of children and vulnerable individuals.
- Use the spindle only for its intended purpose as specified in this guide.
- Follow all local regulations and guidelines regarding product safety and usage.

Specific Safety Precautions for Use

- Ensure that you are wearing appropriate personal protective equipment (PPE) such as gloves and safety goggles during installation and usage.
- Do not exceed the recommended torque specifications when installing the spindle to avoid stripping or damaging the threads.
- Avoid using the spindle in wet or damp conditions to prevent slipping or loss of grip.
- If you experience any unusual noises or resistance during use, stop immediately and inspect the spindle for issues.
- Do not modify or alter the spindle in any way, as this may compromise safety and functionality.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools for installation, including a wrench and torque wrench.
- Ensure that the work area is clean and welllit.

2. Installation Steps:

- Align the spindle with the seater head.
- Insert the spindle into the designated opening, ensuring a snug fit.
- Use a wrench to tighten the spindle. Follow the manufacturer's torque specifications.
- Doublecheck that the spindle is securely fastened and that there are no loose parts.

3. Usage Instructions:

- Use the spindle only with compatible seating components.
- Regularly check the spindle during use for any signs of wear or damage.
- If any issues arise, cease use immediately and consult a professional.

Disposal Instructions

- Dispose of the spindle in accordance with local regulations regarding metal and plastic waste.
- Do not dispose of the spindle in regular household waste.
- Consider recycling options available in your area to minimize environmental impact.

Contact Information for Further Support

For any questions or concerns regarding the spindle, please contact your local distributor or the manufacturer. Always keep the product packaging and receipt for reference.

Conclusion

By following these safety instructions, you can ensure a safe and effective experience with the Spindle M6/M4 for Seater Head. Thank you for your attention to safety and for choosing TRIEBEL.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk