

spindle for seater head - spindle M6/M4 for seater head

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

spindle M6/M4 for seater head

NO IMAGE
AVAILABLE

Attributes

- Name: [spindle M6/M4 for seater head](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2013513
- Mfr. No.: 30000530100
- Delivery weight: 0.01kg
- Shipping height: 100mm
- Shipping width: 6mm
- Shipping length: 6mm

Table of Contents

- [Startpage](#)
- [Safety Instructions for Spindle M6/M4 for Seater Head](#)
- [About Us](#)

Safety Instructions for Spindle M6/M4 for Seater Head

Introduction

Thank you for purchasing the Spindle M6/M4 for Seater Head by TRIEBEL. This safety instruction guide is designed to help you understand how to use the product safely and effectively. Please read this guide carefully before using the spindle to ensure your safety and the longevity of the product.

General Safety Guidelines

- Always follow the manufacturer's instructions for safe use and maintenance of the spindle.
- Ensure that the spindle is suitable for your specific seater head model before installation.
- Inspect the spindle for any visible damage before use. Do not use if damaged.
- Keep the spindle out of reach of children and vulnerable individuals.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Regularly check for product recalls on the EU Safety Gate platform.

Specific Safety Precautions for Use

- Use personal protective equipment (PPE) such as gloves and safety glasses when handling the spindle.
- Ensure that the work area is clean and welllit to prevent accidents.
- Do not exceed the recommended load capacity of the spindle.
- Avoid using the spindle in wet or damp conditions to reduce the risk of electrical hazards.
- Do not modify the spindle in any way, as this may compromise its safety and functionality.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools for installation.
- Ensure the work area is free from clutter and hazards.

2. Installation Steps

- Disconnect any power source to the seater head before installation.
- Align the spindle with the designated attachment point on the seater head.
- Secure the spindle using the appropriate fasteners as specified in the seater head manual.
- Doublecheck that the spindle is firmly attached and stable.

3. Usage Instructions

- Operate the seater head in accordance with the manufacturer's guidelines.
- Monitor the spindle for any unusual noises or vibrations during operation.
- If any issues arise, stop using the spindle immediately and inspect for damage or wear.

Disposal Instructions

- Dispose of the spindle in accordance with local regulations for electronic waste.
- Do not dispose of the spindle in regular household waste.
- Consider recycling options for materials if applicable.

Contact Information for Further Support

For any questions or concerns regarding the spindle or safety instructions, please refer to your local TRIEBEL distributor or authorized dealer for assistance.

Thank you for taking the time to read this safety instruction guide. Your safety is our priority, and we hope you enjoy using the Spindle M6/M4 for Seater Head.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk